

Uninstall user access rights / change license

This guide shows how to uninstall a user right on a Febdok installation, as well as how to change the license on your Febdok.

Uninstalling user access rights

To uninstall a user right in Febdok, you must log in as Admin.

NB! Only Admin can do this.

Go to Setup->License handling

ộ Febdok	
Installation Registe	r Setup Help
🖹 💓 🕤 🙆	Preferences
	Change Language
	Change password
	Switch user
	Users logged on
	User administration
	Licence handling

Figure 1 Go to License handling.

Febdok			?	×
Licence number	4004	License version	Network	
Program package	Complete	Licence code	Internal	
Licencee				
Company name	NHO Elektro			
Department	Test			
Property name				
Street address	Middelthuns ga	te 27		
Postoffice Box	Postboks 5467,	Majorstua		
ZIP code/name	0305	OSLO		
Country				
User access rights				
Subscription			17	
No. installed			2	
No. available			7	
No. to be transferred			0	
Install user	access rights			
Um (metelling			Finished	
Un-install us	er access rights		Finisnea	

Figure 2 Number or user access rights installed

Febdok

k				?
Licence number	4004	License version	Network	
Program package	Complete	Licence code	Internal	
Licencee				
Company name	NHO Elektro			
Department	Test			
Property name	set address Middelthuns gate 27 stoffice Box Postboks 5467, Majorstua			
Street address	Middelthuns ga	ate 27		
Postoffice Box	Postboks 5467	, Majorstua		
ZIP code/name	0305	OSLO		
Country				
User access rights				
Subscription			17	
No. installed			2	
No. available			7	
No. to be transferred			2	
Install use	r access rights			

Figure 3 Transfer all user access rights and click un-install user access rights

Licence number	4004	License version	Network
Program package	Complete	Licence code	Internal
Licencee			
Company name	NHO Elektro		
Department	Test		
Property name			
Street address	Middelthuns g	ate 27	
Postoffice Box	Postboks 5467	, Majorstua	
ZIP code/name	0305	OSLO	
Country			
User access rights			
Subscription			17
No. installed			0
No. available			9
No. to be transferred			0
Inetallu	ser access rights		New activating key
moun u			
motan u			

Figure 4 User access rights have been uninstalled.

The user access rights you just uninstalled can now be installed on a new Febdok installation.



Change License/Activation Key in Febdok

When "No. Installed" is 0 (see Figure 4), a "New Activation Key" button will appear. This means you must uninstall all user licenses for this button to appear.

Licence number	4004	License version	Network
Program package	Complete	Licence code	Internal
Licencee			
Company name	NHO Elektro		
Department	Test		
Property name			
Street address	Middelthuns ga	te 27	
Postoffice Box	Postboks 5467,	Majorstua	
ZIP code/name	0305	OSLO	
Country			
User access rights			
Subscription No. installed No. available			9
Subscription No. installed No. available No. to be transferred			0 0
Subscription No. installed No. available No. to be transferred	er access rights	_ (0 9 New activating key

Figure 5 The New Activation Key button is enabled when the number of installed user access rights is 0.

Clicking "New Activation key" will give you the option to enter a new activation key.

Activating licence			?	×
Activating key				
		L		
	Cancel	OK		

Figure 6 Enter the new activation key and transfer the user access rights to the program.

Febdok

k			? ×
Licence number	4004 License version	n Network	
Program package	Complete Licence code	Internal	
Licencee			
Company name	NHO Elektro		
Department	Test		
Property name			
Street address	Middelthuns gate 27		
Postoffice Box	Postboks 5467, Majorstua		
ZIP code/name	0305 OSLO		
Country			
User access rights			
Subscription		17	
No. installed		0	
No. available		9	
No. to be transferred		2	
Install use	er access rights	New activating key	
Un-install u	iser access rights	Finished	

Figure 7 Transfer the desired number of user access rights and click on "Install User access rights".